

GLASSOUSE G-SPEECH	GLASSOUSE G-SPEECH	GLASSOUSE G-SPEECH
5. PLAYBACK RECORDINGS	7. CLEAR RECORDINGS	9. PRECAUTIONS
<ul> <li>Start Playback – Press the connected switch to play a recording. The "▶ triangle symbol" on the screen will change to a "∥ vertical equal symbol", indicating playback is in progress.</li> <li>Pause Playback – Press the switch again to pause.</li> <li>Auto Stop – Playback will stop automatically when the recording finishes.</li> <li>Switch Channels – Press the Channel Selection button on the device or use a GS Series switch connected to the side port. Each press will cycle through channels 1, 2, 3, 4, and 5 in sequence.</li> </ul>	<ul> <li>Clear Channel Recordings – To delete all recordings on the current channel, press and hold the Channel Selection button until you hear a beep. While holding it, press and hold the Volume (-) button for two seconds to confirm deletion.</li> <li>Clear All Recordings – To erase all saved recordings, press and hold the Channel Selection button until you hear a beep. While holding it, press and hold the Volume (+) button for two seconds to confirm deletion.</li> <li>LOW BATTERY AND CHARGING</li> </ul>	<ul> <li>When disconnecting the GS Series Switch, handle the 3.5mm plug and wire connection points carefully to avoid damage.</li> <li>Keep the device away from water, moisture, and liquids to prevent malfunctions.</li> <li>Do not expose the device to fire or high temperatures.</li> <li>Do not use the device while it is charging.</li> <li>Keep the device away from magnets to prevent interference or damage to internal components.</li> </ul>
<ul> <li>6. ADJUST VOLUME</li> <li>Press the Volume – and Volume + buttons to increase or decrease the volume by 10% per press. The screen will display the current volume level.</li> <li>For faster adjustments, long-press the Volume – or Volume + buttons.</li> </ul>	<ul> <li>Low Battery – The battery icon on the screen will blink when the battery is low.</li> <li>Charging – Connect the device to a power source using the Type-C charging port. During charging, the battery icon will blink and show a running signal.</li> <li>Charging Complete – Once fully charged, the battery icon will display a full battery symbol.</li> </ul>	
GlassOuse Assistive Device 05	Glass@use Assistive Device 06	GlassOuse 07 Assistive Device

材质: 100g 牛皮纸 尺寸: 折前尺寸: 400\*100mm 折后尺寸: 80\*100mm 风琴折黑白印刷

symbol, and the recording will be saved automatically. If the recording reaches the 30-second limit, it will be saved automatically as well.

recording mode. The hollow symbol will change to a triangle symbol.

Glass⊕use 03

> Designed by EnnoPro | Assembled in China Address: 7th Floor, Huarong Building, Qiaolian East, Bulong Road, Longgang District, 518129, Shenzhen, Guangdong, China Phone: 0086-755-89205835 Mail: support@glassouse.com Web: www.glassouse.com ☺ © 2025 ↔ EnnoPro Group Limited |All rights reserved

04

GT02-G-SPEECH USER MANUAL

## 4. CONNECT AND RECORD

• Connect a Switch – Insert a G-Switch into any of the three 3.5mm headphone jacks on the front panel.

• Before Recording – The screen will display a triangle symbol.

• **To Record** – Press the Record button on the device; the "▶ triangle symbol will change to a " ◎ hollow symbol". Then, long-press the connected switch for three seconds

to start recording. The "O hollow symbol" will turn into a "• solid circle", indicating that recording is in progress. • Stop and Save Recording – Press the connected switch again to stop recording. The screen will display the hollow

• Exit Recording Mode – Press the record button to exit Note: Each recording can be up to 30 seconds long.